A. Introduction

1. Title: Reliability Coordination — Current Day Operations

- **2. Number:** IRO-005-1
- **3. Purpose:** The Reliability Coordinator must be continuously aware of conditions within its Reliability Coordinator Area and include this information in its reliability assessments. The Reliability Coordinator must monitor Bulk Electric System parameters that may have significant impacts upon the Reliability Coordinator Area and neighboring Reliability Coordinator Areas.

4. Applicability

- **4.1.** Reliability Coordinators.
- 4.2. Balancing Authorities.
- **4.3.** Transmission Operators.
- **4.4.** Transmission Service Providers.
- **4.5.** Generator Operators
- **4.6.** Load-Serving Entities.
- **4.7.** Purchasing-Selling Entities
- 5. Effective Date: November 1, 2006

B. Requirements

- **R1.** Each Reliability Coordinator shall monitor its Reliability Coordinator Area parameters, including but not limited to the following:
 - **R1.1.** Current status of Bulk Electric System elements (transmission or generation including critical auxiliaries such as Automatic Voltage Regulators and Special Protection Systems) and system loading.
 - **R1.2.** Current pre-contingency element conditions (voltage, thermal, or stability), including any applicable mitigation plans to alleviate SOL or IROL violations, including the plan's viability and scope.
 - **R1.3.** Current post-contingency element conditions (voltage, thermal, or stability), including any applicable mitigation plans to alleviate SOL or IROL violations, including the plan's viability and scope.
 - **R1.4.** System real and reactive reserves (actual versus required).
 - **R1.5.** Capacity and energy adequacy conditions.
 - **R1.6.** Current ACE for all its Balancing Authorities.
 - **R1.7.** Current local or Transmission Loading Relief procedures in effect.
 - **R1.8.** Planned generation dispatches.
 - **R1.9.** Planned transmission or generation outages.
 - **R1.10.** Contingency events.
- **R2.** Each Reliability Coordinator shall be aware of all Interchange Transactions that wheel through, source, or sink in its Reliability Coordinator Area, and make that Interchange Transaction information available to all Reliability Coordinators in the Interconnection.

- **R3.** As portions of the transmission system approach or exceed SOLs or IROLs, the Reliability Coordinator shall work with its Transmission Operators and Balancing Authorities to evaluate and assess any additional Interchange Schedules that would violate those limits. If a potential or actual IROL violation cannot be avoided through proactive intervention, the Reliability Coordinator shall initiate control actions or emergency procedures to relieve the violation without delay, and no longer than 30 minutes. The Reliability Coordinator shall ensure all resources, including load shedding, are available to address a potential or actual IROL violation.
- **R4.** Each Reliability Coordinator shall monitor its Balancing Authorities' parameters to ensure that the required amount of operating reserves is provided and available as required to meet the Control Performance Standard and Disturbance Control Standard requirements. If necessary, the Reliability Coordinator shall direct the Balancing Authorities in the Reliability Coordinator Area to arrange for assistance from neighboring Balancing Authorities. The Reliability Coordinator shall issue Energy Emergency Alerts as needed and at the request of its Balancing Authorities and Load-Serving Entities.
- **R5.** Each Reliability Coordinator shall identify the cause of any potential or actual SOL or IROL violations. The Reliability Coordinator shall initiate the control action or emergency procedure to relieve the potential or actual IROL violation without delay, and no longer than 30 minutes. The Reliability Coordinator shall be able to utilize all resources, including load shedding, to address an IROL violation.
- **R6.** Each Reliability Coordinator shall ensure its Transmission Operators and Balancing Authorities are aware of Geo-Magnetic Disturbance (GMD) forecast information and assist as needed in the development of any required response plans.
- **R7.** The Reliability Coordinator shall disseminate information within its Reliability Coordinator Area, as required.
- **R8.** Each Reliability Coordinator shall monitor system frequency and its Balancing Authorities' performance and direct any necessary rebalancing to return to CPS and DCS compliance. The Transmission Operators and Balancing Authorities shall utilize all resources, including firm load shedding, as directed by its Reliability Coordinator to relieve the emergent condition.
- **R9.** The Reliability Coordinator shall coordinate with Transmission Operators, Balancing Authorities, and Generator Operators as needed to develop and implement action plans to mitigate potential or actual SOL, IROL, CPS, or DCS violations. The Reliability Coordinator shall coordinate pending generation and transmission maintenance outages with Transmission Operators, Balancing Authorities, and Generator Operators as needed in both the real time and next-day reliability analysis timeframes.
- **R10.** As necessary, the Reliability Coordinator shall assist the Balancing Authorities in its Reliability Coordinator Area in arranging for assistance from neighboring Reliability Coordinator Areas or Balancing Authorities.
- **R11.** The Reliability Coordinator shall identify sources of large Area Control Errors that may be contributing to Frequency Error, Time Error, or Inadvertent Interchange and shall discuss corrective actions with the appropriate Balancing Authority. The Reliability Coordinator shall direct its Balancing Authority to comply with CPS and DCS.
- **R12.** Whenever a Special Protection System that may have an inter-Balancing Authority, or inter-Transmission Operator impact (e.g., could potentially affect transmission flows

resulting in a SOL or IROL violation) is armed, the Reliability Coordinators shall be aware of the impact of the operation of that Special Protection System on inter-area flows. The Transmission Operator shall immediately inform the Reliability Coordinator of the status of the Special Protection System including any degradation or potential failure to operate as expected.

- **R13.** Each Reliability Coordinator shall ensure that all Transmission Operators, Balancing Authorities, Generator Operators, Transmission Service Providers, Load-Serving Entities, and Purchasing-Selling Entities operate to prevent the likelihood that a disturbance, action, or non-action in its Reliability Coordinator Area will result in a SOL or IROL violation in another area of the Interconnection. In instances where there is a difference in derived limits, the Reliability Coordinator and its Transmission Operators, Balancing Authorities, Generator Operators, Transmission Service Providers, Load-Serving Entities, and Purchasing-Selling Entities shall always operate the Bulk Electric System to the most limiting parameter.
- **R14.** Each Reliability Coordinator shall make known to Transmission Service Providers within its Reliability Coordinator Area, SOLs or IROLs within its wide-area view. The Transmission Service Providers shall respect these SOLs or IROLs in accordance with filed tariffs and regional Total Transfer Calculation and Available Transfer Calculation processes.
- **R15.** Each Reliability Coordinator who foresees a transmission problem (such as an SOL or IROL violation, loss of reactive reserves, etc.) within its Reliability Coordinator Area shall issue an alert to all impacted Transmission Operators and Balancing Authorities in its Reliability Coordinator Area without delay. The receiving Reliability Coordinator shall disseminate this information to its impacted Transmission Operators and Balancing Authorities. The Reliability Coordinator shall notify all impacted Transmission Operators, Balancing Authorities, when the transmission problem has been mitigated.
- **R16.** Each Reliability Coordinator shall confirm reliability assessment results and determine the effects within its own and adjacent Reliability Coordinator Areas. The Reliability Coordinator shall discuss options to mitigate potential or actual SOL or IROL violations and take actions as necessary to always act in the best interests of the Interconnection at all times.
- **R17.** When an IROL or SOL is exceeded, the Reliability Coordinator shall evaluate the local and wide-area impacts, both real-time and post-contingency, and determine if the actions being taken are appropriate and sufficient to return the system to within IROL in thirty minutes. If the actions being taken are not appropriate or sufficient, the Reliability Coordinator shall direct the Transmission Operator, Balancing Authority, Generator Operator, or Load-Serving Entity to return the system to within IROL or SOL.

C. Measures

Not specified.

D. Compliance

Not specified.

E. Regional Differences

None identified.